Single power mode (SPM)
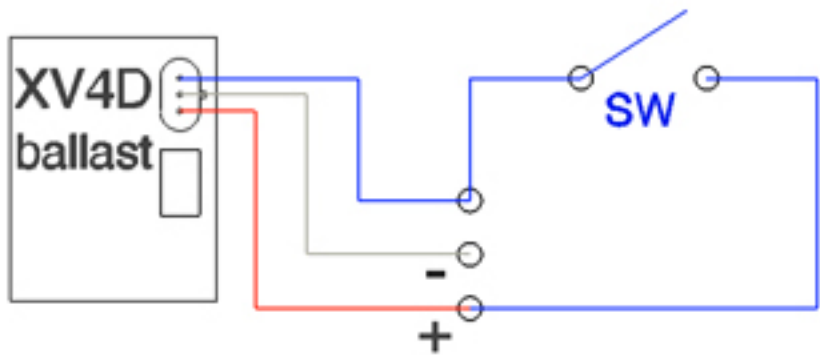

XV4D ballast

SW

Power on: SW open

Power off: SW closed